POLARIS-12
INSTALLATION
INSTRUCTIONS FOR
SWIVEL MOUNT

STERNER™
INFRANOR™

MOUNTING AND
AIMING

DANGER: DISCONNECT A.C. POWER SOURCE BEFORE INSTALLING OR SERVICING FIXTURE!

TOOLS REQUIRED FOR INSTALLATION:

1. PHILIPS SCREW DRIVER.
2. WIRE STRIPPER.
3. 3/4" OPEN END WRENCH.
4. RACHET WRENCH WITH 3/4" SOCKET.
5. 1/8" ALLEN WRENCH.

STEP #1
(1) REMOVE THIS COVER AND COVER ON OPPOSITE SIDE.

STEP #2
(2) REMOVE THIS COVER TO EXPOSE WIRES (THIS SIDE ONLY).

STEP #3
(3) ADJUST FLOODLIGHTS' VERTICAL AIMING ANGLE THEN TIGHTEN THIS SCREW WITH WRENCH; SEE PICTURE BELOW. BE CAREFUL OF THE WIRES. -REPLACE GASKETED COVER WITH (2) PHILIPS FLAT HEAD SCREWS.

STEP #4
(4) TIGHTEN THIS NUT WITH A 3/4" SOCKET SCREW AND WRATCHET. REPLACE COVER WITH (2) PHILIPS FLAT HEAD SCREWS.

STEP #5
(5) MAKE WIRING CONNECTIONS AND STOW WIRES INSIDE FITTER. -REPLACE GASKETED COVER WITH (2) PHILIPS FLAT HEAD SCREWS.

STEP #6
(6) AFTER HORIZONTAL AIMING ADJUSTMENT, LOCK (4) SET-SCREWS, (2) ON THIS SIDE, (2) ON OTHER SIDE, ONTO 2" PIPE TENON WITH 1/8" ALLEN WRENCH.

STEP #7
(7) TO INSTALL LAMP, USE PHILIPS SCREW DRIVER TO LOOSEN (4) DOOR SCREWS TO ACCESS LAMP COMPART-MENT. (SCREWS ARE CAPTIVE). RELACE DOOR AND TIGHTEN ALL 4 SCREWS

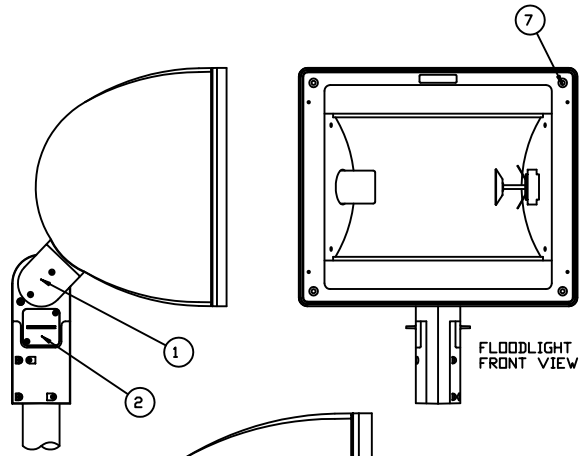

FLOODLIGHT
FRONT VIEW

FLOODLIGHT
LEFT SIDE

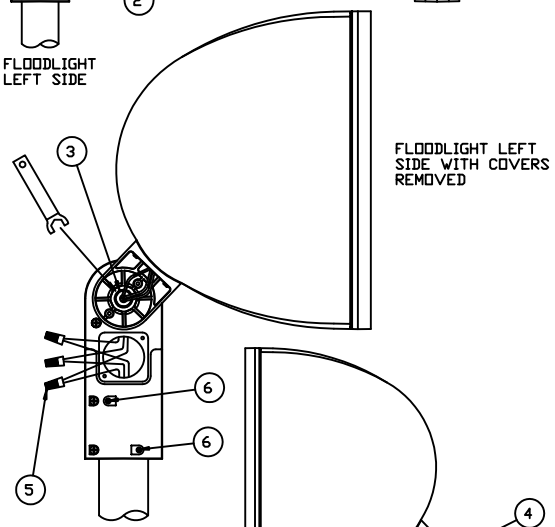

FLOODLIGHT LEFT
SIDE WITH COVERS
REMOVED

FLOODLIGHT
RIGHT SIDE

POLARIS-12
INSTALLATION
INSTRUCTIONS FOR
SWIVEL MOUNT

STERNER™
INFRANOR™

SERVICING

DANGER: DISCONNECT A.C. POWER SOURCE BEFORE INSTALLING OR SERVICING FIXTURE!

TOOLS REQUIRED FOR INSTALLATION:

1. PHILIPS SCREW DRIVER.
2. RACHET WRENCH WITH 5/16" SOCKET.

STEP #1
(1) TO SERCIVE LAMP OR BALLAST, USE PHILIPS SCREW DRIVER TO LOOSEN (4) DOOR SCREWS TO ACCESS LAMP COMPART-MENT. (SCREWS ARE CAPTIVE).

STEP #2
(2) REMOVE THIS SCREW TO REMOVE DOOR ASSEMBLY FROM FIXTURE

STEP #3
(3) MAKE SURE CABLE DOES NOT INTERFER WITH DOOR GASKET WHEN CLOSING TO FIXTURE.

STEP #4
(4) REMOVE THESE (4) SCREWS TO SERVICE BALLAST.

STEP #5
(5) REFLECTOR SYSTEM REMOVED FROM FLOODLIGHT

STEP #6
(6) DISCONNECT PULLS APART TO REMOVE REFLECTOR SYSTEM FROM FLOODLIGHT.

NOTES
1) ALWAYS REPLACE WITH SAME TYPE BALLAST, CAPACITOR AND (STARTER IF REQUIRED).
2) ALWAYS REPLACE FUSES WITH SAME TYPE AND RATING.

CAUTION:
TO PREVENT DAMAGE TO INTERNAL COMPONENTS, REPLACE LAMP AT OR BEFORE LAMP RATED END OF LIFE. CONSULT LAMP MANUFACTURE FOR SPECIFIC DETAILS ON LAMP LIFE AND RELAMPING RECOMMENDATIONS.

CAUTION
FIXTURE CONTAINS SILICONE AND EPDM GASKETS. CLEANING THE GLASS & FIXTURE SURFACES WITH STRONG CHEMICALS MAY DAMAGE THE GASKETS AND OR PAINT. USE CAUTION, FLUSH AND CLEAN WITH CLEAN WATER AFTER CLEANING WITH CHEMICALS.

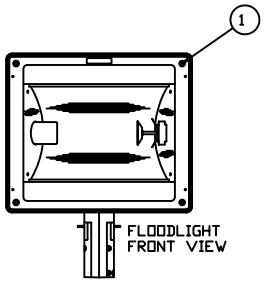

FLOODLIGHT
FRONT VIEW

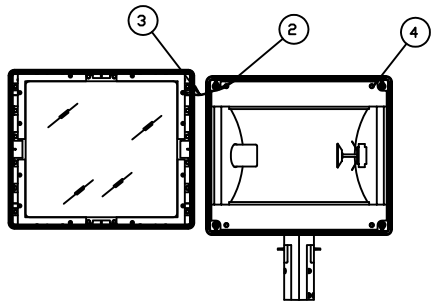

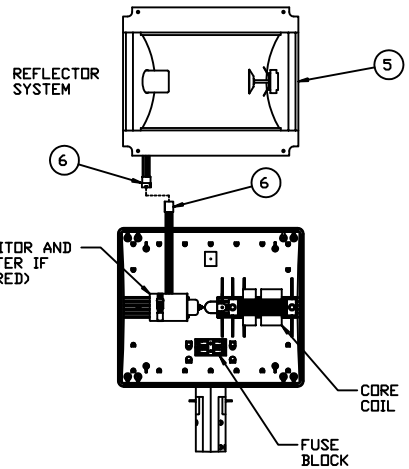

STERNER LIGHTING SYSTEMS, INC. 351 LEWIS AVE. W. P.O. BOX 605 WINSTED MN. 55395-0605 PHONE: 320.485.2141 FAX: 320.485.2881 7IS00647000c